 
 
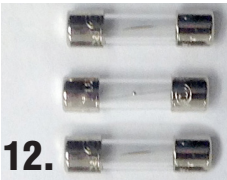 
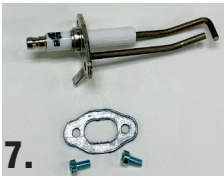 


Alta/Alta Combi Boiler Service Kit

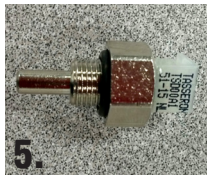

Top Lid/Top Tray • Content Guide - Kit 111419-01

Picture No.	Part Number	Description	Location on Boiler
1	105882-01	Gasket, Flue Outlet	Flue
2	105883-01	Sensor, Flue Temperature	Flue
3	106033-01	Thumb Screws, Front Panel	Jacket
4	106994-01	Sensor, Supply Water Temperature	Internal Piping
5	106991-01	Sensor, Return Water Temperature	Internal Piping
6	107862-01	Air Proving Switch	Jacket
7	111423-01	Ignitor/Flame Sensor w/Gasket	Heat Exchanger
8	110584-01	Combi Flow Restrictor	Combi Assembly
9	110878-01	DHW Adapters (2), Metric to Copper	Under Combi Boiler
10	110879-01	Gasket Kit, Gas Connections	Internal Gas Piping
11	106527-01	Gasket, Flame Sensor	Heat Exchanger
12	111420-01	Fuse Kit	Boiler Control

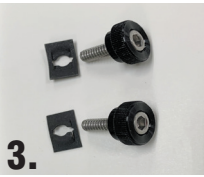

Alta/Alta Combi Boiler Service Kit



Bottom Compartment • Content Guide - Kit 111419-01

Picture No.	Part Number	Description	Location on Boiler
1	105651-01	Rear Insulation Disc, Heat Exchanger	Heat Exchanger
2	105892-01	Boiler Flow Switch	Internal Piping
3	110577-01	Water Gaskets	Internal Piping
4	110579-01	Combi Return Sensor/DHW Temp Sensor	Combi Assembly
5	110582-01	Combi 3-way Valve w/Actuator	Combi Assembly
6	110585-01	Combi DHW Flow Sensor	Combi Assembly
7	110598-01	Harness, Ignition Cable	Heat Exchanger
8	110880-01	Burner Door Gasket	Heat Exchanger
9	111422-01	Gas Connection Adapter	Under Boiler

