

SuperPak Content Guide









For Adaptive Combustion Boilers

BULK PARTS (IN BAGS)

Photo	Part Number	Description	Location
1	105882-01	Gasket, Flue Outlet	Flue
2	105883-01	Sensor, Flue Temperature	Flue
3	106033-01	Thumb Screws, Fr. Panel	Jacket
4	106994-01	Sensor, Supply Water Temperature	Internal Piping
5	106991-01	Sensor, Return Water Temperature (Heating Boiler)	Internal Piping
6	107862-01	Air Proving Switch	Jacket
7	111423-01	Ignitor/Flame Sensor w/ Gasket	Heat Exchanger
8	110584-01	Combi Flow Restrictor	Combi Assembly
9	110878-01	DHW Adapters (2), Metric to Copper (Combi)	Under Combi Boiler
10	110585-01	Combi DHW Flow Sensor	Combi Assembly
11	106527-01	Gasket, Flame Sensor	Heat Exchanger
12	111420-01	Fuse Kit	Boiler Control
13	110598-01	Harness, Ignition Cable	Heat Exchanger
14	105892-01	Boiler Flow Switch	Internal Piping
15	111422-01	Gas Connection Adapter	Under Boiler

INDIVIDUAL ITEMS

Photo	Part Number	Description	Location
16	110577-01	Water Gaskets	Internal Piping
17	110579-01	Combi Return Sensor/ DHW Temp Sensor	Combi Assembly
18	110582-01	Combi 3-way Valve w/ Actuator	Combi Assembly
19	110879-01	Gasket Kit, Gas Gaskets	Internal Gas Piping
20	105651-01	Rear Insulation Disc, Heat Exchanger	Heat Exchanger
21	110880-01	Burner Door Gasket	Heat Exchanger
22	111971-01	Control Board	Control Enclosure
23	111564-01	Gas Valve - Yellow (150-200)	Gas Train
24	110587-01	Gas Valve - Blue (120-136)	Gas Train
25	111979-01	Gas Valve - Gray (80)	Gas Train
26	110586-01	Blower Assembly (80-136)	Gas Train
27	111571-01	Blower Assembly (150-200)	Gas Train
28	110580-01	Combi Circulator Pump	Combi Assy.

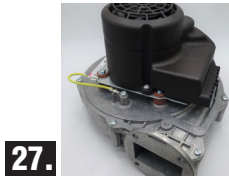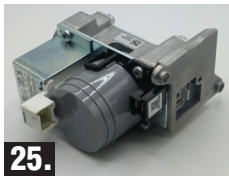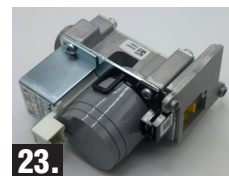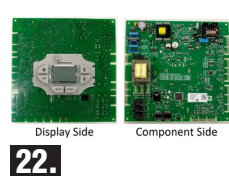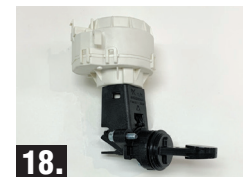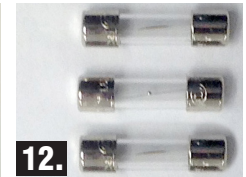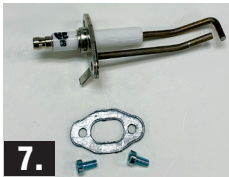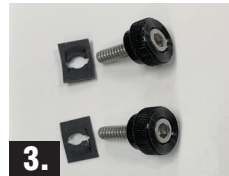

U.S. Boiler Company